

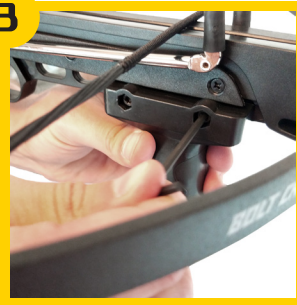
1

- 1.** Slip the vertical grip over the frame. Slide the grip into a position where the 2 holes in the grip clear 2 alternating spaces on the track.

NOTE: You may need to flip the grip around to ensure the bolt cans can pass through the grip holes and secure to the nut properly.

2

- 2.** Drop the 2 nuts into the slots provided on the grip.

3

- 3.** While holding the 2 nuts in place with your fingers, flip the crossbow over and insert the bolts into the opposite holes. Secure the bolts in place with the Allen wrench provided.

BOLT
CROSSBOWS[®]

**Vertical Grip
Assembly Instructions**